

Syncho Tilt Mechanism Instructions

Syncho tilt weight activated mechanism; the seat and the back move independently with adjustable height gas pneumatic lift. The mechanism has one lever on the right side of the chair with a knob on the end of the lever.

Height Adjustment Lever Instructions

To Raise Chair

With the right hand, pull lever up while taking your weight off the chair.

To Lower Chair

With the right hand, pull lever up while seated.

Tilt Adjustment Lever Instructions

There are four tilt positions controlled by the knob at the end of the lever:

- * With the knob rotated all the way forwards, the chair will not tilt
- * The second click allows the back to lean at a 10° position

To Lock Tilt Recline

Bring the backrest to the desired position using your body weight and, with your right hand, push button inwards.

To Unlock Tilt Recline

With the right hand, pull button outwards and unlock the tilt using your body weight.



Syncho Tilt Mechanism



Syncho Tilt Mechanism shown under the Renn Chair



Alta



Renn