


# BERNHARDT | design

Ace



# BERNHARDT | design

## Ace

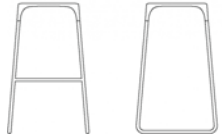


### Counter Height

Polypropylene Seat

Chrome or Powder Coat Frame

W17<sup>5</sup>/<sub>8</sub>" D17<sup>1</sup>/<sub>2</sub>" H25<sup>1</sup>/<sub>4</sub>"

Seat height: 25<sup>1</sup>/<sub>4</sub>

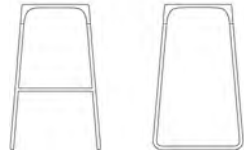

### Bar Height

Polypropylene Seat

Chrome or Powder Coat Frame

W18<sup>3</sup>/<sub>8</sub>" D18<sup>1</sup>/<sub>4</sub>" H29<sup>1</sup>/<sub>2</sub>"

Seat height: 29<sup>1</sup>/<sub>2</sub>