

BERNHARDT | design

Item

Patrick Jouin



BERNHARDT | design

Item

Patrick Jouin



Center Module

High Back

W38" D37 $\frac{1}{4}$ " H31 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "




Center Module

Low Back

W29 $\frac{1}{2}$ " D37 $\frac{1}{4}$ " H29 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "

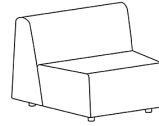

Wedge Module

Low Wide Back

W38" D36 $\frac{5}{8}$ " H29 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "




Wedge Module

Low Narrow Back

W37 $\frac{1}{4}$ " D35 $\frac{3}{4}$ " H29 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "




Wedge Module

Low Left/Right Facing

W38" D37 $\frac{1}{4}$ " H31 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "

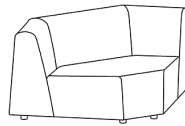


Corner Module

Low Back

W47 $\frac{1}{4}$ " D47 $\frac{1}{4}$ " H29 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "

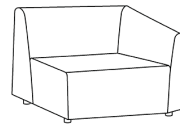


End Module

Low Back, Left/Right Facing

Arm

W38" D42 $\frac{3}{8}$ " H29 $\frac{1}{8}$ "

Seat Height: 25 $\frac{3}{8}$ "

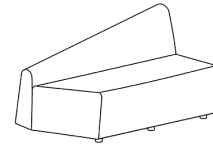

End Module

Runoff Back, Left/Right

Facing

W64 $\frac{1}{4}$ " D36 $\frac{1}{8}$ " H29 $\frac{1}{8}$ "

Seat Height: 16 $\frac{3}{4}$ "