

BERNHARDT | design

Cinema


Noé Duchaufour-Lawrance



BERNHARDT | design

Cinema

Noé Duchaufour-Lawrance

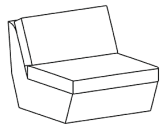


Single Seat Module

Straight Connector

W30⁵/₈" D35⁵/₈" H29"

Seat Height: 16¹/₂"

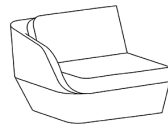


Single Seat Module

Left/Right Arm Facing

W35¹/₈" D35⁵/₈" H29"

Seat Height: 16¹/₂"

Arm Height: 23¹/₄"

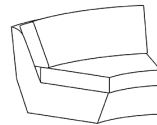


45° Module

Curved Connector

W45³/₄" D37⁵/₈" H29"

Seat Height: 16¹/₂"

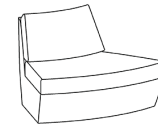


45° Module

Inverted Curved Connector

W45" D37¹/₂" H29"

Seat Height: 16¹/₂"

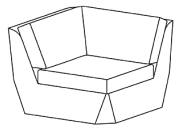


90° Module

Curved Connector

W35⁵/₈" D35⁵/₈" H29"

Seat Height: 16¹/₂"

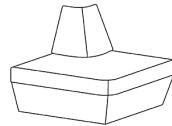


90° Module

Inverted Corner Connector

W35⁵/₈" D35⁵/₈" H29"

Seat Height: 16¹/₂"

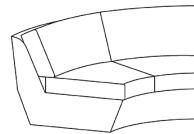


67.5° Module

Curved Connector

W65¹/₄" D39¹/₄" H29"

Seat Height: 16¹/₂"

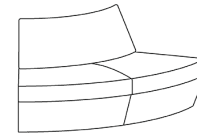

67.5° Module

Inverted Curved Connector


W65¹/₄" D39¹/₄" H29"

Seat Height: 16¹/₂"

BERNHARDT | design

Cinema

Noé Duchaufour-Lawrance

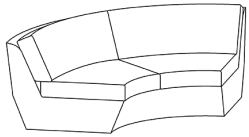


90° Module

Curved Connector

W83 $\frac{3}{4}$ " D42 $\frac{1}{8}$ " H29"

Seat Height: 16 $\frac{1}{2}$ "

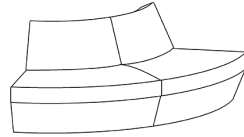


90° Module

Inverted Curved Connector

W83" D42 $\frac{1}{2}$ " H29"

Seat Height: 16 $\frac{1}{2}$ "

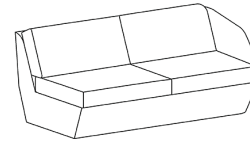


Two-Seat Module

Left/Right Arm Facing

W65 $\frac{3}{4}$ " D35 $\frac{5}{8}$ " H29"

Seat Height: 16 $\frac{1}{2}$ "

Arm Height: 23 $\frac{1}{4}$ "

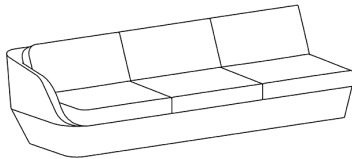

Three-Seat Module

Left/Right Arm Facing

W96 $\frac{1}{4}$ " D35 $\frac{5}{8}$ " H29"

Seat Height: 16 $\frac{1}{2}$ "

Arm Height: 23 $\frac{1}{4}$ "