

IMPORTANT NOTES

Failure to install product according to installation instructions will result in loss of warranty. Actual configuration may vary.

When moving Code modular units, lift base and move into position. Never lift unit using wall or drag unit across floor.

Yellow carton contains all hardware required for assembly:

mending plate

4 machine screws

top cover plate



adjustable glides, ganging bracket fork and ganging bracket plate (pre-installed)

Leveling / Ganging Modular Units

Unpack Code modules and move into the desired location. (See DIAGRAM 1)



Level the seat front-to-back and side-to-side by adjusting the height of the glides located on the underside of the plinth bases, under the seating block. (See DIAGRAM 2)

Turn (rotate) the ganging bracket forks so that they are perpendicular to the seat. (See DIAGRAM 3)

Align the units so the ganging bracket forks will fit around the ganging bracket plates.

With a person on each side of the modular grouping, push the units together. (See DIAGRAM 4)

See the following instructions for securing walls with mending plate.

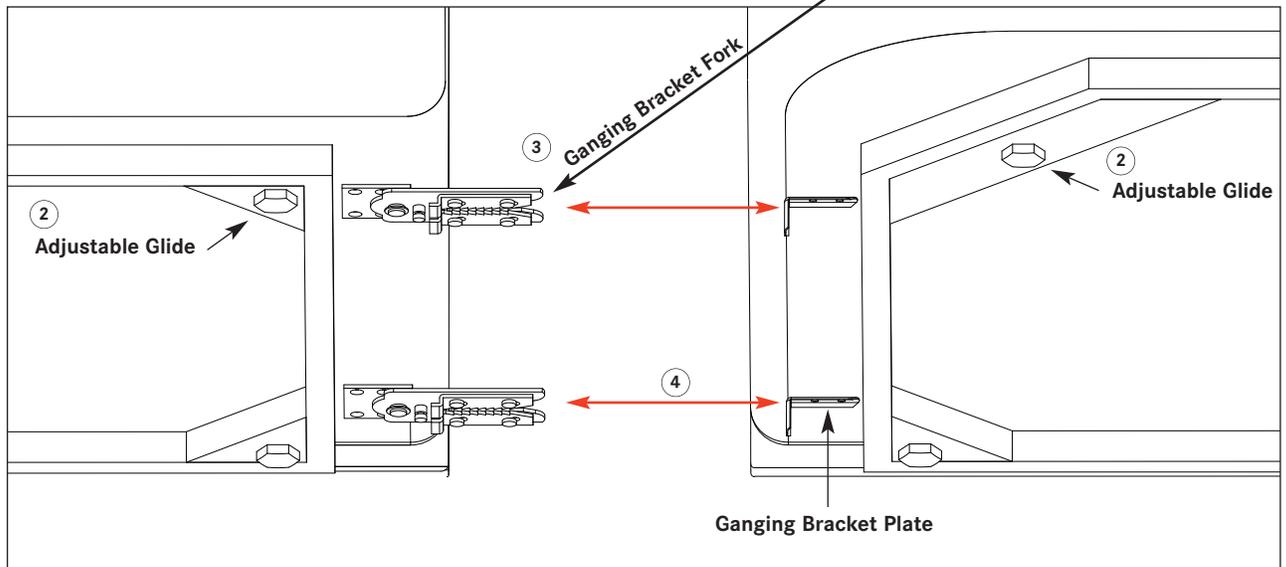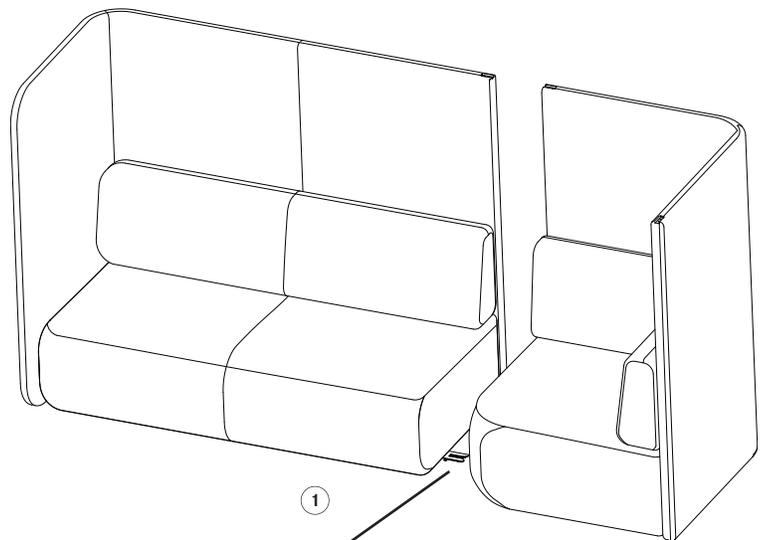

View of Underside

Mending Plate Installation

After leveling and ganging modular units, align the walls.

Place the mending plate in the recessed area on top of the upholstered walls so that the holes in the mending plate aligns with the holes in the top of each wall. (See DIAGRAM 5)

Using a 2mm allen wrench and the machine screws provided, attach the mending plate to pull together and secure the upholstered walls. (See DIAGRAM 6)

When all four screws are secure, remove the backing from the peel-and-stick adhesive located on the underside of the top cover plate. (See DIAGRAM 7)

Place the cover plate on top of the mending plate with adhesive facing down. Apply with even pressure until the top plate bonds to the mending plate. (See DIAGRAM 8)

Repeat steps for installation of additional units if necessary.

